



## 7) Example of Connecting to MITSUBISHI Positioning Unit AD72

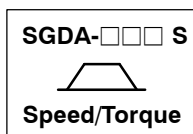

## Servopack for Speed/Torque Control

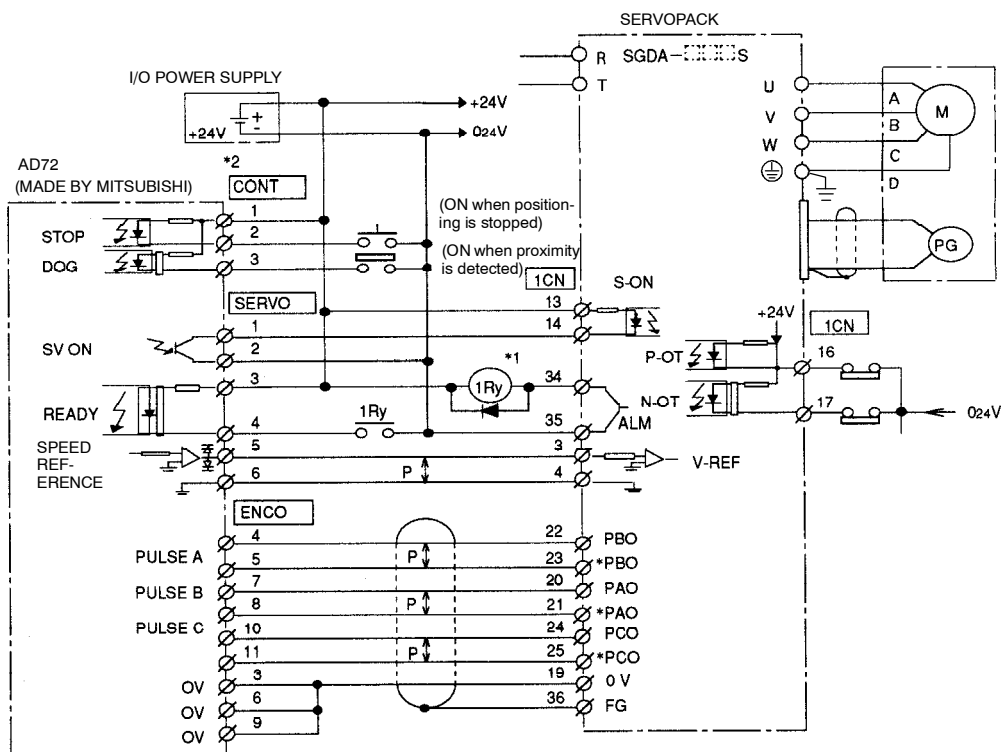

\*1 These signals are output for approximately two seconds when the power is turned ON. Take this into consideration when designing a power ON sequence. Relay 1Ry is used to stop main circuit power supply to Servopack.

\*2 These pin numbers are the same for both X and Y axes.

**Note** The signals shown here are applicable only to MITSUBISHI Sequencer AD72 and Yaskawa Servopack SGDA-□□□S.